

SUMMIT TELECOM

©2013 SUMMIT TELECOM ALL RIGHTS RESERVED

Web: www.summittelecomm.com

E-mail: sales@summittelecomm.com
summittelecomm@hotmail.com



FTTH Fast Connector and Mechanical Splicer Item Code:STMS

Installation Manual for Mechanical Splicer

● **Description:**


Our Mechanical Splicer STMS is suitable for 3.1*2.0mm FTTH Drop Cable, and also be suitable for Indoor Cable 3.0mm/2.0mm.



● **Installation Steps:**

1, Open the cover, take out splicer

2, The size of cover stripping

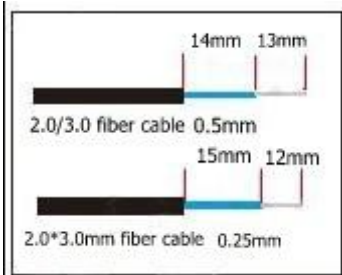

3, Put the fiber after cutting through the screw cap.

4,Put the fiber through the splicer



5,Put the other fiber through the splicer from the other side.

6,Put the fiber optic cable after connected with splicer into the slot of under cover.



7,Put on the upper cover,screw on the screw caps

8,Installation finished

